

OPERATING TIPS


The operation of your Polar King walk-in cooler and/or freezer has been engineered to be as simple and trouble free as possible. This catalog provides you some helpful hints for everyday use of your equipment.

- (1) After unit has been delivered, we recommend that anyone who will work with your Polar King unit take a minute and walk through it to familiarize themselves with the unit.

THINGS TO LOOK FOR:

- A. Door Handle: Locking equipment and safety equipment.
 - B. Lighting: Location of switch, indicator light, and light bulb.
 - C. Thermometer: Proper operating temperature. If the temperature displayed on the thermometer is incorrect, the thermometer may be out of adjustment. Verify the walk-in temperature with another thermometer, and follow the pointer-reset instructions.
 - D. Thermostat: Location on right side of evaporator coil in unit. Adjusting dial higher or lower can change the temperature. Polar King recommends that you do not run your unit any cooler than required for economical operation. (Do not set a cooler below 32 degrees Fahrenheit or damage may occur.)
- (2) Keep door opening and closing to a minimum to conserve energy.
 - (3) When working inside, close the door behind you. There is a door opener inside.
 - (4) When loading unit, be careful not to block the airflow from coil.
 - (5) Periodically check coil fan for proper operation. Check coil for ice. Faulty fan or iced coil will cost you unneeded power use.

TO RESET DIAL THERMOMETER POINTER

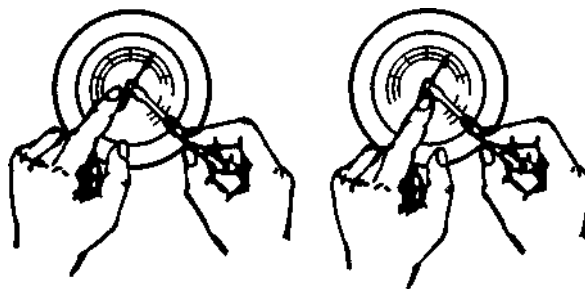

FOR LOWER TEMPERATURE

Place left index finger at wide end of pointer, but close to hub. Insert screwdriver in pointer slot and turn slowly clockwise. Adjust to proper setting.

FOR HIGHER TEMPERATURE

Place left index finger at wide end of pointer, but close to hub. Insert screwdriver in pointer slot and turn slowly counter-clockwise. Adjust to proper setting.